




Kolpin Hand Guard Mounting Instructions-97300

Parts list:


NO.	Description	Material/Specification	QTY.	Spare P/N
1	L.H. Hand Guard	Molded	1	87030
2	R.H. Hand Guard	Molded	1	87031
3	Mounting Bar (left)	Aluminum	1	77302
4	Mounting Bar (right)	Aluminum	1	
5	Mounting Strap	Steel	2	
6	Spacer Block	Plastic	2	
7	Hex Bolt	1/4" - 20 Hex Head, 2.25" L, Zinc-Plated Steel	2	
8	Hex Nut	1/4" - 20 Nylock Nut	4	
9	Star Washer	1/4" Steel	2	
10	Screw	#10 - 32 Pan Head, 0.5" L, Zinc-Platted Steel	2	
11	Hex Bolt	1/4" - 20 Hex Head, 1.25" L, Zinc-Platted Steel	2	

Mounting:

- Align the Right Mounting Bar to the handle bars on the riser portion of the right side. Using the Mounting Strap, 1" Hex bolt, and Screw, fasten the Mounting Bar to the handle bars. (In some cases cutting the vinyl sleeve and removing it may be necessary) Align the Screw through the Mounting Strap and into the threaded hole on the Mounting Bar and tighten. Align the 1" Hex bolt through the Mounting Strap and the Mounting Bar and install the lock nut. Snug but do not tighten at this time.

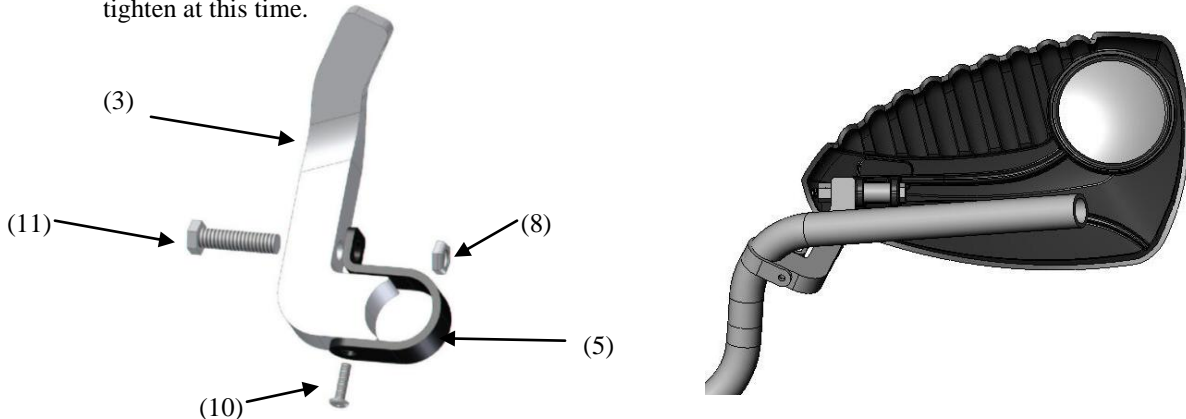

- Position the Right Hand Guard in front of the Mounting Bar so that the holes on the posts align with the hole on the Mounting Bar. Refer to the drawing below for the three options for mounting the Hand Guard to the Mounting Bar. Using the 2.25" Hex bolt, Spacer Block, Lock Washer and Hex Nut, fasten the Hand Guard to the Mounting Bar in your desired position by inserting the bolt from the mirror side of the hand guard. You **MUST** use the star washer between the aluminum mounting bar and the plastic mounting surface! The star washer must contact the plastic surface AND the mounting bracket in order to prevent the hand guard from pivoting on the mount. DO not over tighten the mounting bolt and nut or you can damage the plastic mounting boss on the handguard!.

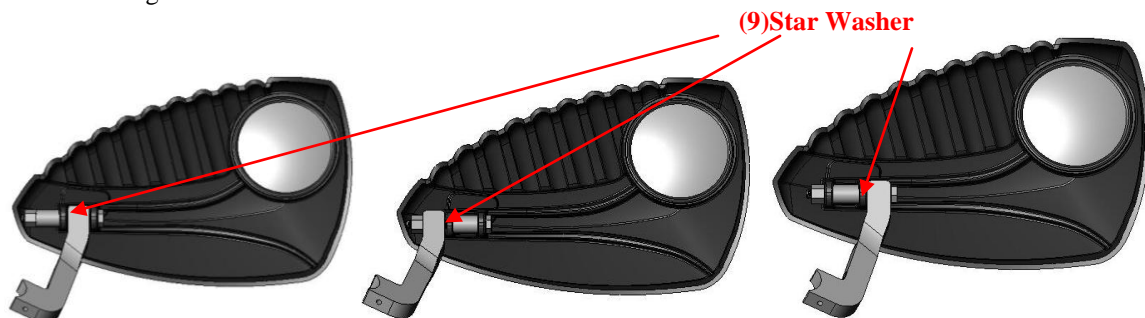

3. Tighten all Mounting Bar and Hand Guard Bolts after you have achieved the desired position.
4. Repeat Steps 1-3 for the LEFT side application.

For additional assistance, please contact our customer service department at (877)-9KOLPIN or customerservice@kolpin.com.

97300 -Mode de montage des protège-main Kolpin

Liste des pièces

Réf.	Désignation	Matériau/Caractéristiques	Qté	N° de pièce de rechange
1	Protège-main (gauche)	Moulé	1	87030
2	Protège-main (droit)	Moulé	1	87031
3	Barre de fixation (gauche)	Aluminium	1	77302
4	Barre de fixation (droite)	Aluminium	1	
5	Bride de fixation	Acier	2	
6	Cale d'écartement		2	
7	Boulon à 6 pans	Tête hexagonale 20 de 1/4 po, 2,25 po (L), acier zingué	2	
8	Écrou à 6 pans	Écrou 20 de 1/4 po à frein élastique	4	
9	Rondelle en étoile	En acier de 1/4 po	2	
10	Vis	Tête cylindrique bombée n° 10-32, 0,5 po (L), acier zingué	2	
11	Boulon à 6 pans	Tête hexagonale 20 de 1/4 po, 1,25 po (L), acier zingué	2	

Montage

1. Placez la barre de fixation droite sur la partie ascendante du côté droit du guidon. À l'aide d'une bride de fixation, d'un boulon de 1 po et d'une vis, montez la barre de fixation sur le guidon. Passez la vis dans la bride de fixation puis dans le trou taraudé de la barre de fixation. Serrez la vis. Passez le boulon de 1 po dans la bride puis dans la barre de fixation et serrez avec l'écrou. (Laissez un peu de jeu de manière à pouvoir régler plus tard l'emplacement de la barre de fixation.)
2. Placez le protège-main droit devant la barre de fixation de manière à aligner les trous des brides sur celui de la barre de fixation. Il y a trois façons possibles de monter le protège-main sur la barre de fixation. À l'aide du boulon de 2,25 po, de la cale d'écartement, de la rondelle de blocage et de l'écrou, fixez le protège-main sur la barre sur la position désirée. (Il sera peut-être nécessaire d'ajuster l'emplacement de la barre de fixation sur le guidon.) Vous devez utiliser la rondelle en étoile entre la barre de fixation en aluminium et la surface de fixation en plastique. La rondelle doit être enfoncée dans le plastique afin d'être bien installée. Ceci évite au protège-main de pivoter sur la fixation. Cependant, ne serrez pas l'écrou trop fort; vous pouvez aussi utiliser du produit de blocage Loctite sur les filets.
3. Serrez tous les boulons de la barre de fixation et du protège-main lorsque la position désirée est trouvée.
4. Répétez les paragraphes 1 à 3 pour le protège-main gauche.

Pour de plus amples détails, veuillez contacter notre service à la clientèle au 877-9KOLPIN ou sur customerservice@kolpin.com.